

## OHVALE GP-0 & OHVALE GP-2 REAR SLIDERS INSTALLATION

1. Position the rear slider as shown in the photo, approximately 1 cm from the edge of the fairing, and mark the hole positions accordingly.



2. Drill the fairing using a drill fitted with a  $\varnothing$  4.5 mm drill bit. Then enlarge the hole using a  $\varnothing$  9.5 mm drill bit. Insert the M5 threaded inserts into the holes.



3. Pre-assemble the slider starting from the upper mounting point, using the supplied M5 screws. Once the pre-assembly is complete, hold the slider firmly against the fairing and proceed with tightening the screws.



## OHVALE GP-2 FRONT WINGLETS INSTALLATION

1. Position the adhesive template as shown in the photo, paying particular attention to the positioning in the areas marked A and B.



2. Drill the fairing at the hole positions indicated on the template using a drill fitted with a  $\varnothing$  4.5 mm drill bit, protecting the fairing by fitting the rubber cylinder supplied in the kit onto the drill bit.



3. Drill both winglets at the pre-marked positions using a  $\varnothing$  4.5 mm drill bit. Then enlarge the holes with a  $\varnothing$  9 mm drill bit and insert the supplied M4 threaded inserts.



## OHVALE GP-2 FRONT WINGLETS INSTALLATION

4. Proceed with fastening the winglets from inside the fairing using the supplied M4 screws.



## OHVALE GP-0 FRONT WINGLETS INSTALLATION


1. Position the adhesive template as shown in the photo, paying particular attention to the positioning in the areas marked A and B.



2. Drill the fairing at the hole positions indicated on the template using a drill fitted with a  $\varnothing 4.5$  mm drill bit, protecting the fairing by fitting the rubber cylinder supplied in the kit onto the drill bit.



3. Drill both winglets at the pre-marked positions using a  $\varnothing 4.5$  mm drill bit. Then enlarge the holes with a  $\varnothing 9$  mm drill bit and insert the supplied M4 threaded inserts.

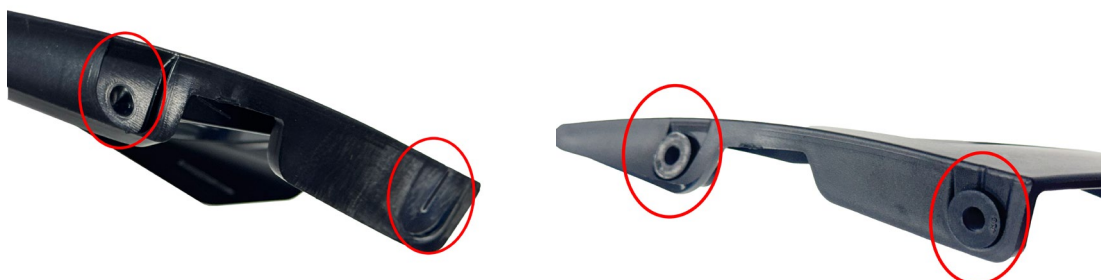

# OHVALE GP-0 FRONT WINGLETS INSTALLATION

4. Proceed with fastening the winglets from inside the fairing using the supplied M4 screws.



**Kit contents:**

- 2 front winglets
- 2 rear sliders
- 2 GP-0 front winglet adhesive templates
- 2 GP-2 front winglet adhesive templates
- 4 M4 screws
- 4 M4 threaded inserts
- 6 M5 screws
- 6 M5 threaded inserts
- 1 protective rubber cylinder

