




# OHVALE GP-0 EVO/GP-2 SADDLE LIFT KIT KIT AND INSTALLATION

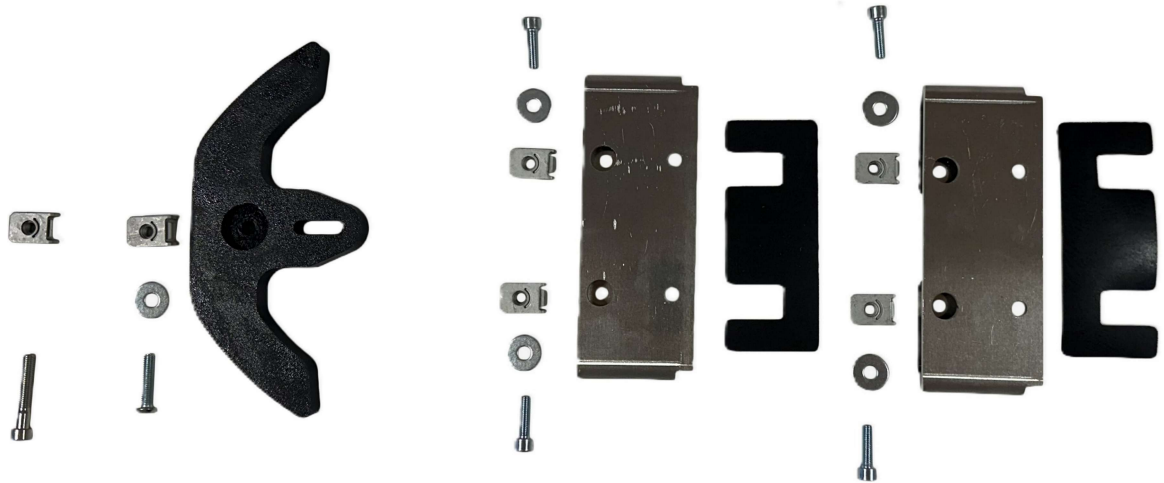


## FRONT



**2x Clip**



**1x M6x35 Screw** (to be used to screw the tank cover to the frame)  
**1x M6x25 Screw**  
**1x Spacer 6.4x18x1.6**

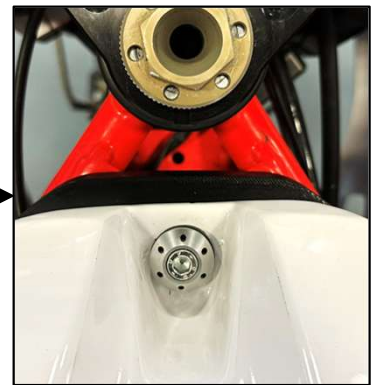


**Completed Installation**


## REAR



**4x Clip** (Please, re-use the 2 clips already installed in the rear frame)

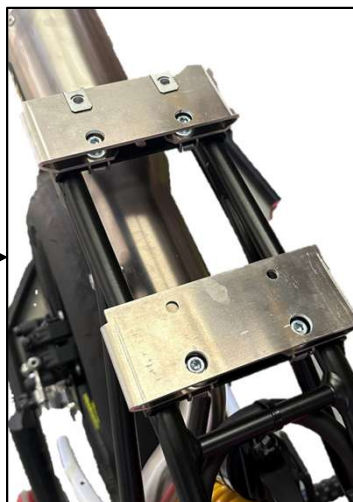

**2x Metal plate**  
**4x M6x20 Screw**  
**4x Spacer 6.4x18x1.6**  
**2x Clip**

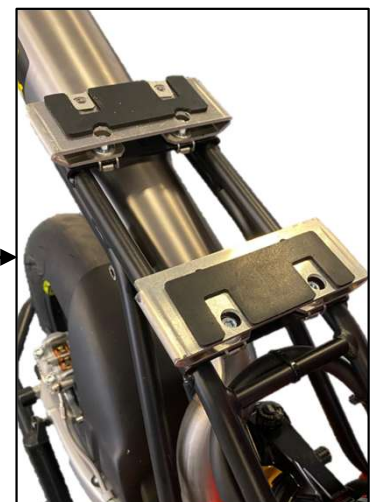

**2x Adhesive**