



ENGINE SPARE PARTS

CATALOGUE

CATALOGO

2026



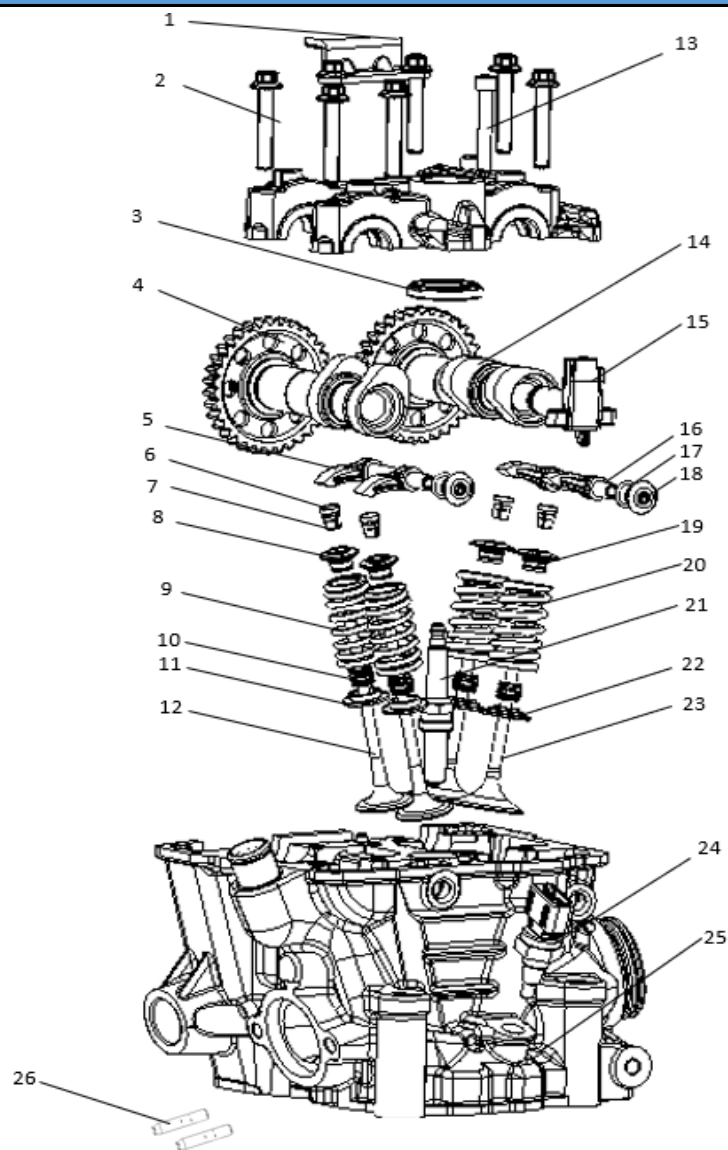
**GR
250**



INDEX

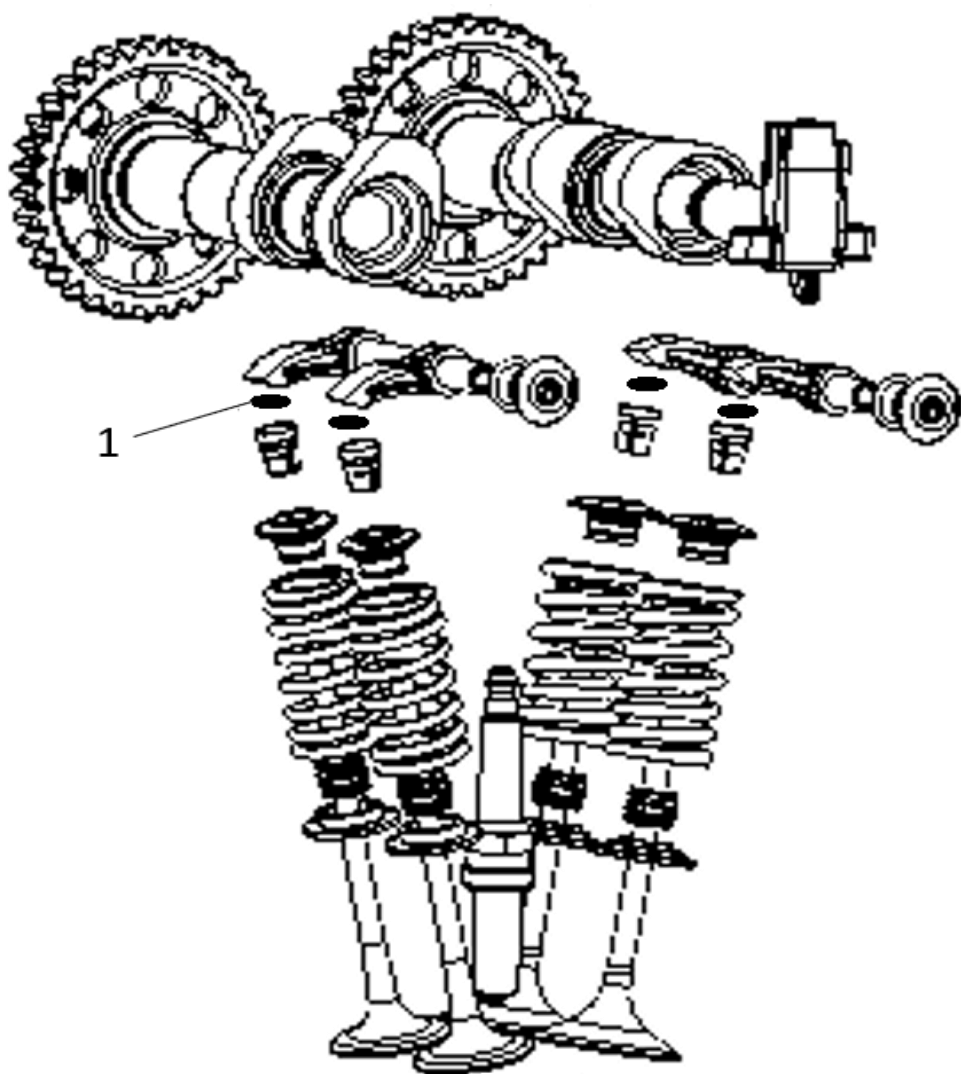
CYLINDER HEAD ASSY	1
SHIMS REGULATION PADS	2
CYLINDER ASSEMBLY	3
CYLINDER HEAD COVER	4
TIMING TRANSMISSION MECHANISM	5
LEFT CRANKCASE SUBASSEMBLY	6
RIGHT CRANKCASE SUBASSEMBLY	7
CLUTCH GEAR	8
STM SLIPPER CLUTCH	9
OIL PUMP	10
LEFT COVER MOUNTED	11
RIGHT COVER MOUNTED	12
CRANKSHAFT CONNECTING-ROD ASSY/PISTON	13
GEARSHIFT MECHANISM	14
TRANSMISSION MAIN,COUNTER SHAFT	15
ELECTRIC STARTING MECHANISM	16

CYLINDER HEAD ASSY



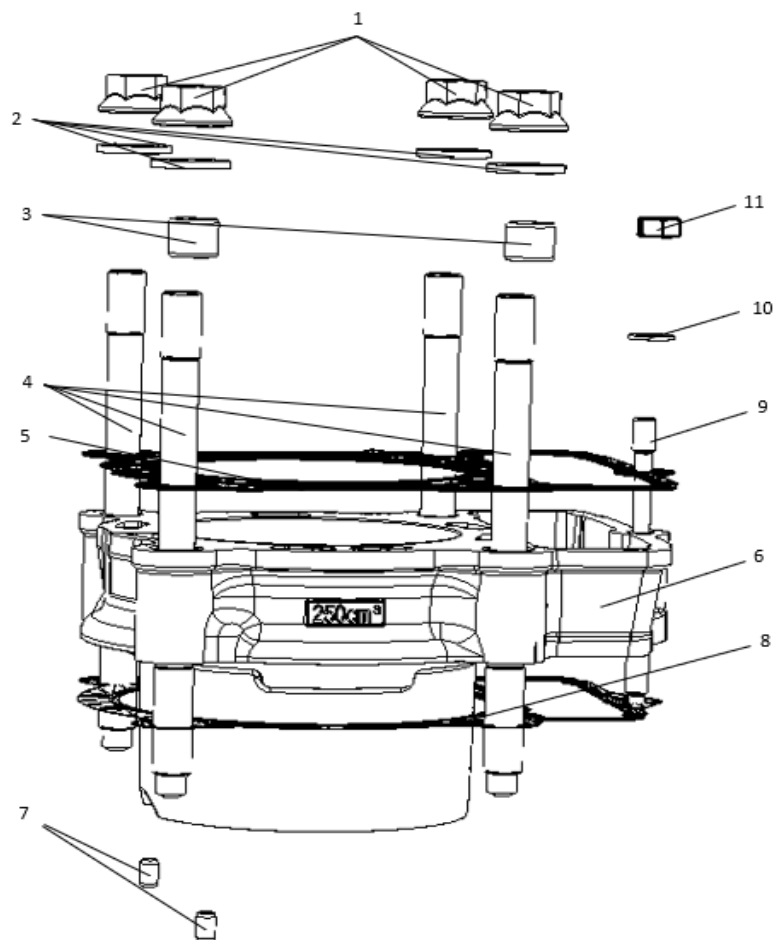
N°	CODE	DESCRIPTION	DESCRIZIONE
1	04.SX.0101.L	CLAMP	MORSETTO
2	04.SX.0102.L	BOLT, M6×40	VITE, M6×40
3	04.SX.0103.L	SPARK HOLE GASKET	GUARNIZIONE FORO CANDELA
4	04.SX.0104.L	EXHAUST CAMSHAFT COMPONENT	ALBERO A CAMME SCARICO
5	04.SX.0105.L	VALVE ROCKER	BILANCIERE VALVOLA SCARICO
6		SEE NEXT PAGE	VEDI PAGINA SEGUENTE
7	04.SX.0107.L	VALVE LOCKER	SEMICONO VALVOLA
8	04.SX.0108.L	EXHAUST SPRING SEAT	SEDE MOLLA VALV. SCARICO SUP
9	04.SX.0109.L	EXHAUST VALVE SPRING	MOLLA VALVOLA DI SCARICO
10	04.SX.0110.L	SEAL VALVE STEM	GUIDA VALVOLA
11	04.SX.0111.L	EXHAUST SPRING SEAT	SEDE MOLLA VALV. SCARICO INF
12	04.SX.0112.L	EXHAUST VALVE	VALVOLA DI SCARICO
13	04.SX.0113.L	BOLT, M6×40	VITE, M6×40
14	04.SX.0114.L	INTAKE CAMSHAFT COMPONENT	ALBERO A CAMME ASP
15	04.SX.0115.L	CAM VENT VALVE	VALVOLA DI SFIATO
16	04.SX.0116.L	VALVE ROCKER ARM SHAFT	BILANCIERE VALVOLA ASPIR
17	04.SX.0117.L	O-RING	O-RING
18	04.SX.0118.L	VALVE ROCKER ARM SHAFT BOLT	VITE POSIZ. ALBERO BILANCIERE
19	04.SX.0119.L	INTAKE SPRING SEAT	SEDE MOLLA VALV. ASPIR SUP
20	04.SX.0120.L	INTAKE VALVE SPRING	MOLLA VALVOLA ASPIRAZIONE
21	04.MO.0005.L	NGK SPARK PLUG	CANDELA NGK
22	04.SX.0122.L	INTAKE SPRING SEAT	SEDE MOLLA VALV. ASPIR INF
23	04.SX.0123.L	INTAKE VALVE	VALVOLA DI ASPIRAZIONE
24	04.SX.0124.L	TEMP. SENSOR COOLING FLUID	SENSORE DI TEMP. FLUIDO RAFF.
25	04.SX.0125.L	CYLINDER HEAD ASSEMBLY	GRUPPO TESTA CILINDRO
26	04.SX.0126.L	BOLT M8x40	PRIGION. M8x40

SHIMS REGULATION PADS



N°	CODE	DESCRIPTION	DESCRIZIONE
1	04.SX.2188.L	SHIMS REGULATION PAD 1,88	PASTIGLIA REG. VALVOLA 1,88
1	04.SX.2190.L	SHIMS REGULATION PAD 1,90	PASTIGLIA REG. VALVOLA 1,90
1	04.SX.2192.L	SHIMS REGULATION PAD 1,92	PASTIGLIA REG. VALVOLA 1,92
1	04.SX.2194.L	SHIMS REGULATION PAD 1,94	PASTIGLIA REG. VALVOLA 1,94
1	04.SX.2196.L	SHIMS REGULATION PAD 1,96	PASTIGLIA REG. VALVOLA 1,96
1	04.SX.2198.L	SHIMS REGULATION PAD 1,98	PASTIGLIA REG. VALVOLA 1,98
1	04.SX.2200.L	SHIMS REGULATION PAD 2,00	PASTIGLIA REG. VALVOLA 2,00
1	04.SX.2202.L	SHIMS REGULATION PAD 2,02	PASTIGLIA REG. VALVOLA 2,02
1	04.SX.2204.L	SHIMS REGULATION PAD 2,04	PASTIGLIA REG. VALVOLA 2,04
1	04.SX.2206.L	SHIMS REGULATION PAD 2,06	PASTIGLIA REG. VALVOLA 2,06
1	04.SX.2208.L	SHIMS REGULATION PAD 2,08	PASTIGLIA REG. VALVOLA 2,08
1	04.SX.2210.L	SHIMS REGULATION PAD 2,10	PASTIGLIA REG. VALVOLA 2,10
1	04.SX.2212.L	SHIMS REGULATION PAD 2,12	PASTIGLIA REG. VALVOLA 2,12
1	04.SX.2214.L	SHIMS REGULATION PAD 2,14	PASTIGLIA REG. VALVOLA 2,14
1	04.SX.2216.L	SHIMS REGULATION PAD 2,16	PASTIGLIA REG. VALVOLA 2,16
1	04.SX.2218.L	SHIMS REGULATION PAD 2,18	PASTIGLIA REG. VALVOLA 2,18
1	04.SX.2220.L	SHIMS REGULATION PAD 2,20	PASTIGLIA REG. VALVOLA 2,20
1	04.SX.2222.L	SHIMS REGULATION PAD 2,22	PASTIGLIA REG. VALVOLA 2,22
1	04.SX.2224.L	SHIMS REGULATION PAD 2,24	PASTIGLIA REG. VALVOLA 2,24
1	04.SX.2226.L	SHIMS REGULATION PAD 2,26	PASTIGLIA REG. VALVOLA 2,26
1	04.SX.2228.L	SHIMS REGULATION PAD 2,28	PASTIGLIA REG. VALVOLA 2,28
1	04.SX.2230.L	SHIMS REGULATION PAD 2,30	PASTIGLIA REG. VALVOLA 2,30
1	04.SX.2232.L	SHIMS REGULATION PAD 2,32	PASTIGLIA REG. VALVOLA 2,32
1	04.SX.2234.L	SHIMS REGULATION PAD 2,34	PASTIGLIA REG. VALVOLA 2,34

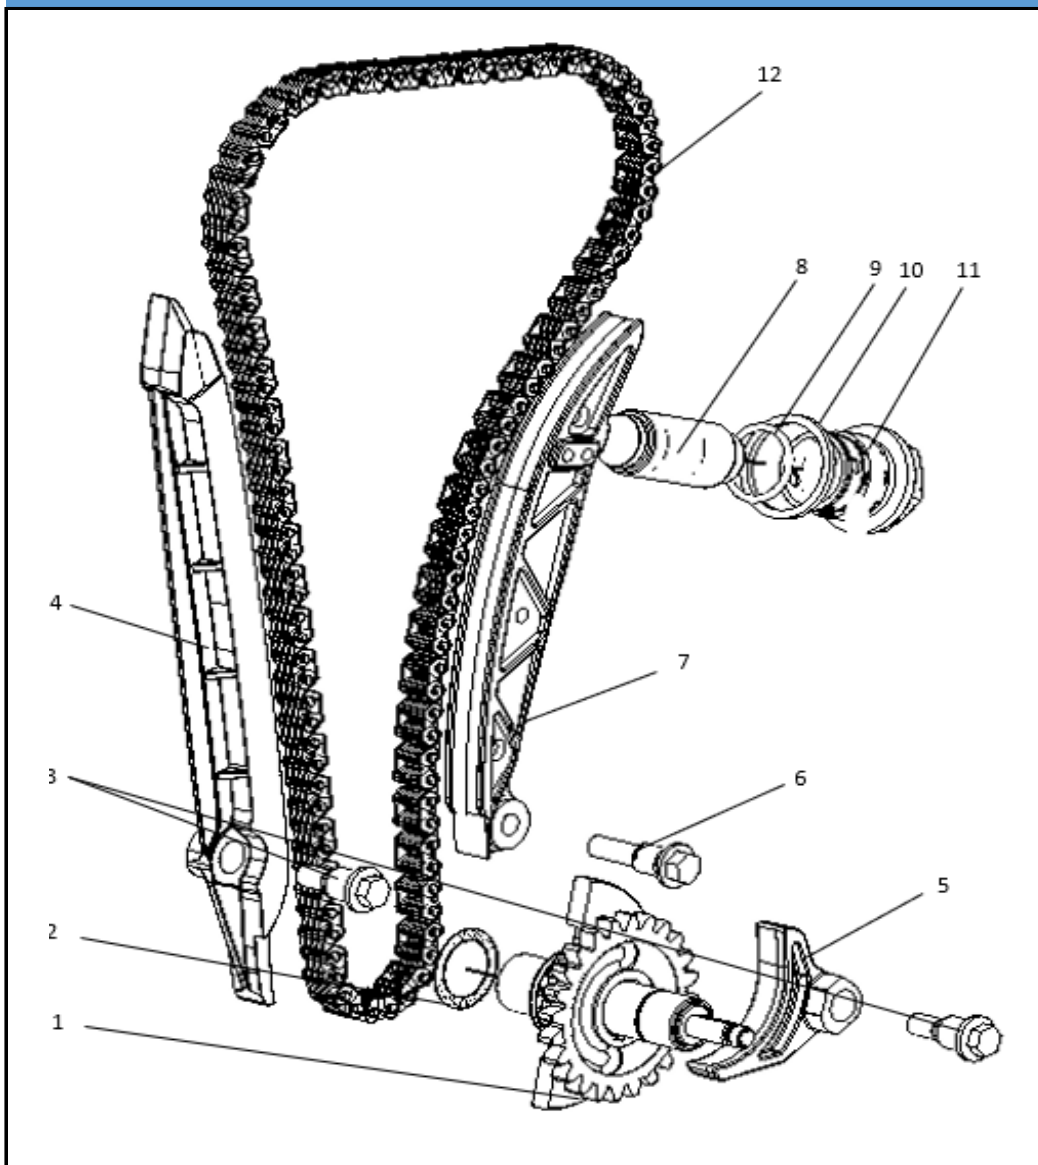
CYLINDER ASSEMBLY

[illegible]

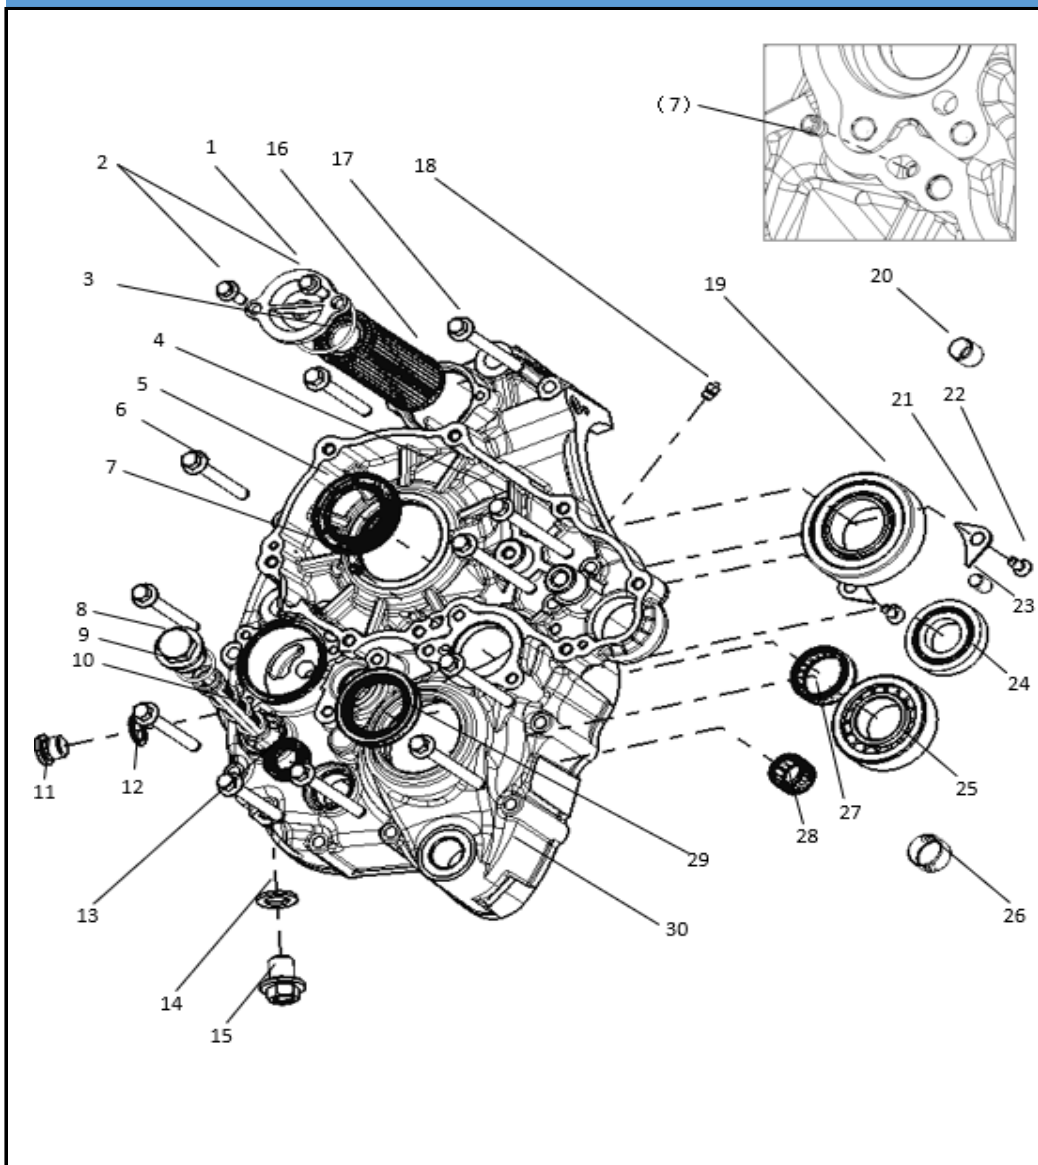


N°

TIMING TRANSMISSION MECHANISM

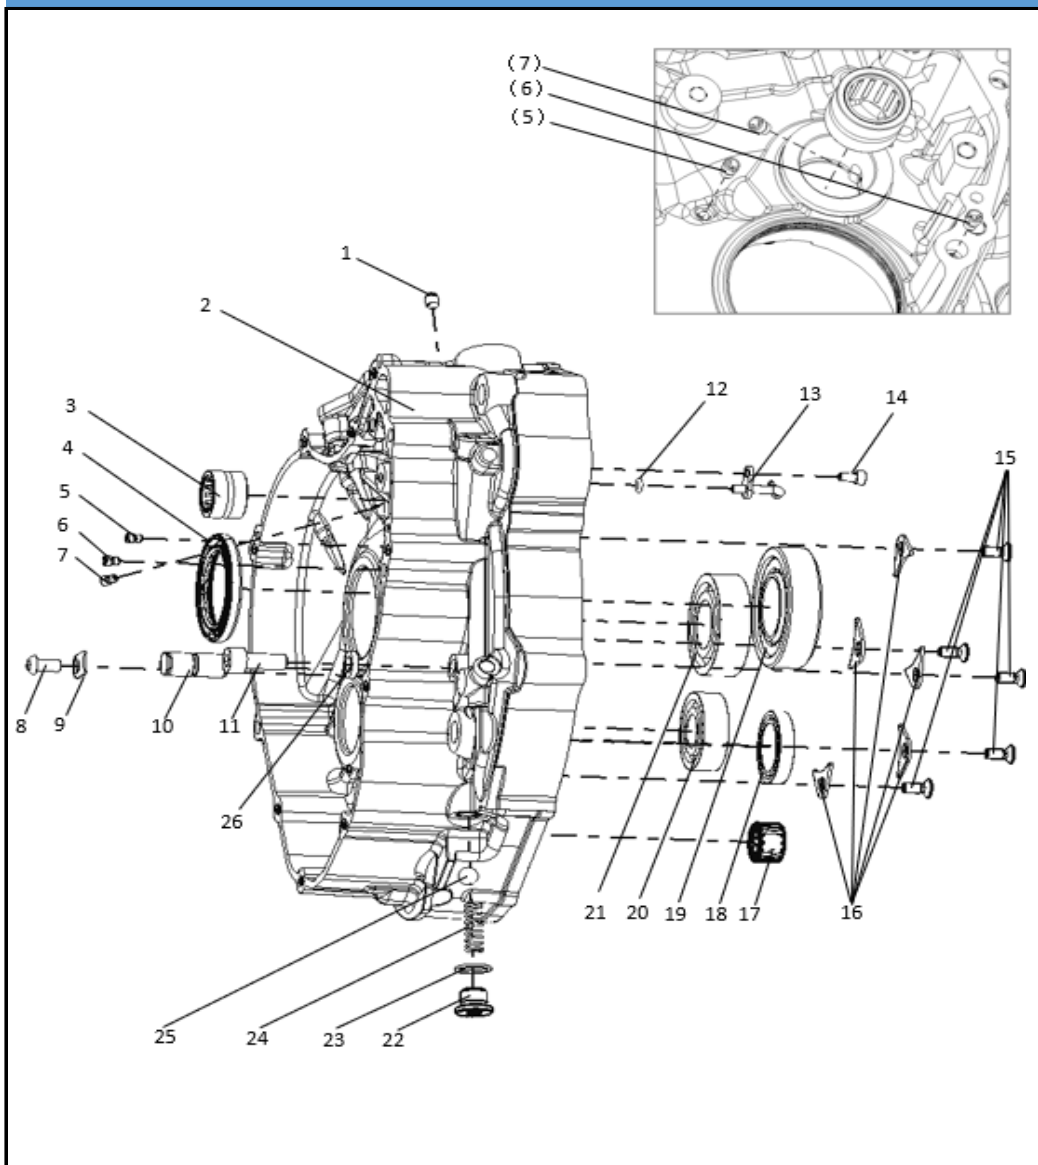
[illegible]

LEFT CRANKCASE SUBASSEMBLY



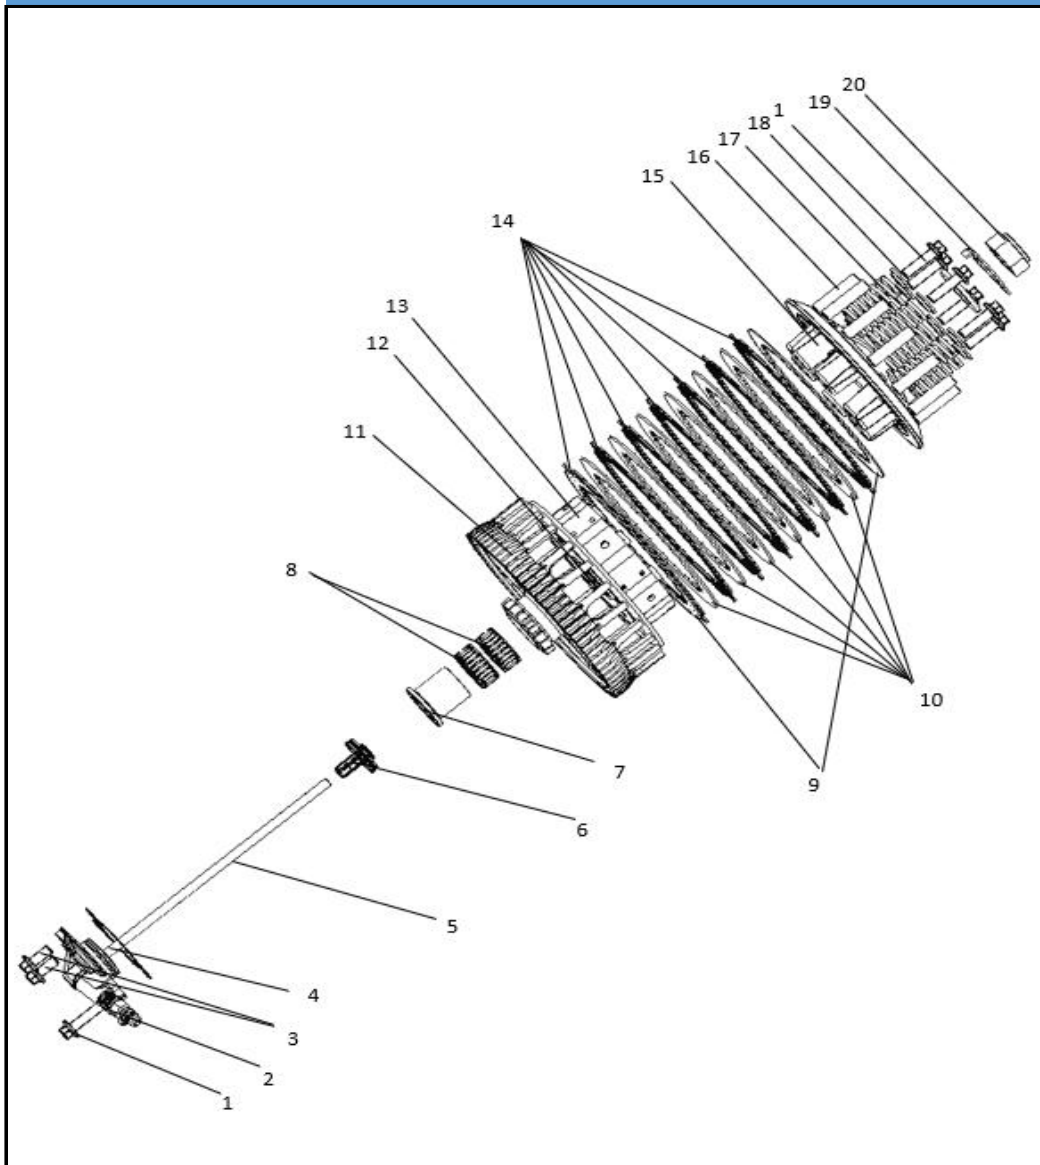
N°	CODE	DESCRIPTION	DESCRIZIONE
1	04.SX.0501.L	CAP OIL FILTER	TAPPO FILTRO OLIO
2	04.SX.0502.L	BOLT, M5×16	VITE, M5×16
3	04.SX.0503.L	O-RING,Φ33×2	O-RING, Φ33×2
4	04.SX.0504.L	BOLT, M6×75	VITE, M6×75
5	04.SX.0505.L	OIL SEAL 47×30×6	PARAOLIO 47×30×6
6	04.SX.0506.L	BOLT, M6×55	VITE, M6×55
7	04.SX.0507.L	PLUG,Φ1.0	SPINA, Φ1.0
8	04.SX.0508.L	COVER OIL FILTER SCREEN	COPERCHIO FILTRO OLIO
9	04.SX.0509.L	O-RING,Φ17.5×1.8	O-RING, Φ17,5×1,8
10	04.MO.0007.L	OIL FILTER	FILTRO OLIO
11	04.SX.0511.L	PRESSURE RELIEF VALVE BOLT	VITE VALVOLA SFOGO
12	04.SX.0512.L	PRESSURE RELIEF VALVE WASHER	RONDELLA, VALVOLA SFOGO
13	04.SX.0513.L	OIL SEAL 14×24×6	PARAOLIO 14×24×6
14	04.SX.0514.L	WASHER,Φ12.1×2×Φ20	RONDELLA, Φ12,1×2×Φ20
15	04.SX.0515.L	DRAIN BOLT	VITE DI SCARICO
16	04.SX.0516.L	OIL FILTER	FILTRO DELL'OLIO
17	04.SX.0517.L	BOLT, M6×65	VITE, M6×65
18	04.SX.0518.L	OIL NOZZLE	UGELLO DELL'OLIO
19	04.SX.0519.L	BEARING,(NJ206)	CUSCINETTO, (NJ206)
20	04.SX.0520.L	DOWEL PIN,Φ13×14	PERNO, Φ13×14
21	04.SX.0521.L	BAFFLE	DEFLETTORE
22	04.SX.0522.L	SCREW, M5×12	VITE, M5×12
23	04.SX.0523.L	DOWEL PIN,Φ8×12×Φ6.3	PERNO, Φ8×12×Φ6,3
24	04.SX.0524.L	BEARING,(TM_16004-Z/C4)	CUSCINETTO, (TM_16004-Z/C4)
25	04.SX.0525.L	BEARING,(NJ205E)	CUSCINETTO, (NJ205E)
26	04.SX.0526.L	DOWEL PIN,Φ19×12×Φ17.5	PERNO, Φ19×12×Φ17,5
27	04.SX.0527.L	BEARING,(HK25×32×10)	CUSCINETTO, (HK25×32×10)
28	04.SX.0528.L	BEARING,(HK14×20×12)	CUSCINETTO, (HK14×20×12)
29	04.SX.0529.L	OIL SEAL 32×47×7	PARAOLIO 32×47×7
30	04.SX.0530.L	LEFT CRANKCASE	CARTER SINISTRO

RIGHT CRANKCASE SUBASSEMBLY



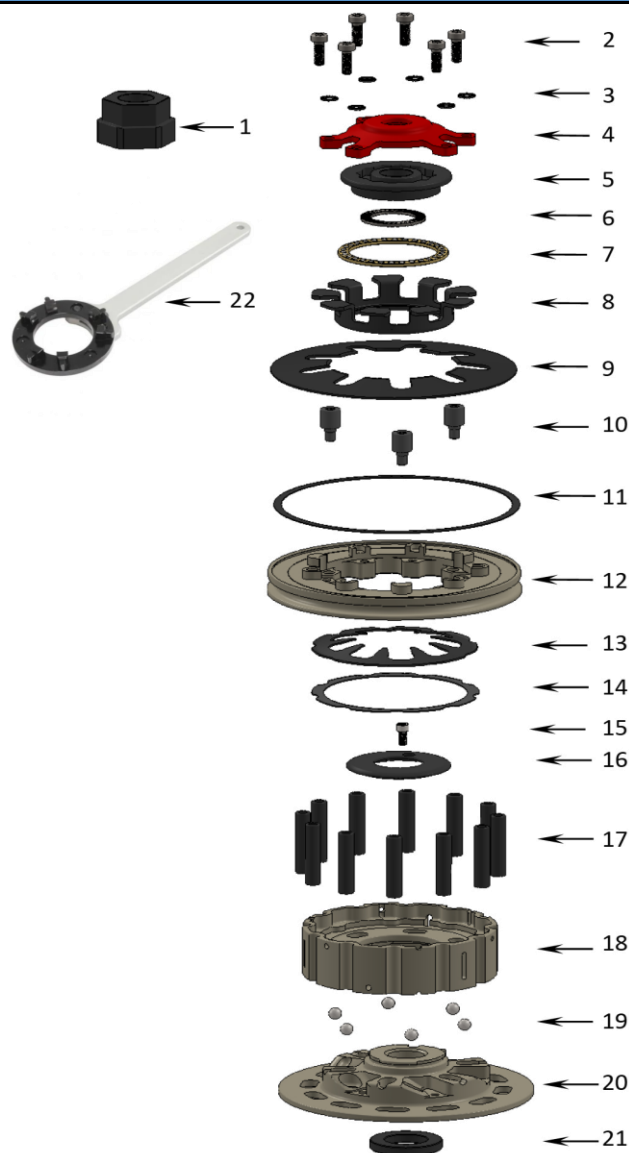
N°	CODE	DESCRIPTION	DESCRIZIONE
1	04.SX.0601.L	PLUG,M6×8	TAPPO, M6×8
2	04.SX.0602.L	RIGHT CRANKCASE	CARTER DESTRO
3	04.SX.0603.L	BEARING,(NK162416)	CUSCINETTO, (NK162416)
4	04.SX.0604.L	OIL SEAL 55×40×6	PARAOILIO 55×40×6
5	04.SX.0507.L	PLUG,Φ1.0	SPINA, Φ1.0
6	04.SX.0606.L	PLUG,Φ1.5	SPINA, Φ1.5
7	04.SX.0607.L	PLUG,Φ0.5	SPINA, Φ0.5
8	04.SX.0608.L	SCREW, M6×12	VITE, M6×12
9	04.SX.0609.L	BAFFLE	DEFLETTORE
10	04.SX.0610.L	GEAR PUMP	POMPA INGRANAGGI
11	04.SX.0611.L	BOLT, M8×20	VITE, M8×20
12	04.SX.0612.L	O-RING,Φ3.68×1.78	O-RING, Φ3,68×1,78
13	04.SX.0613.L	PISTON SPRAY PIPE	TUBO SPRUZZ. PISTONE
14	04.SX.0614.L	BOLT, M4×8	VITE, M4×8
15	04.SX.0522.L	SCREW, M5×12	VITE, M5×12
16	04.SX.0521.L	BAFFLE	DEFLETTORE
17	04.SX.0528.L	BEARING,(HK14×20×12)	CUSCINETTO, (HK14×20×12)
18	04.SX.0618.L	BEARING,(61805)	CUSCINETTO,(61805)
19	04.SX.0619.L	BEARING,(NJ206)	CUSCINETTO, (NJ206)
20	04.SX.0620.L	BEARING,(6203-R0HS)	CUSCINETTO, (6203-R0HS)
21	04.SX.0621.L	BEARING,(6205-P5)	CUSCINETTO, (6205-P5)
22	04.SX.0511.L	PRESSURE RELIEF VALVE BOLT	VITE VALVOLA SFOGO
23	04.SX.0512.L	PRESSURE RELIEF VALVE WASHER	RONDELLA, VALVOLA SFOGO
24	04.SX.0624.L	PRESSURE RELIEF VALVE SPRING	MOLLA, VALVOLA SFOGO
25	04.SX.0625.L	STEEL BALL Φ9	SFERA D'ACCIAIO Φ9
26	04.SX.0626.L	WASHER (Φ8×3×Φ14)	RONDELLA (Φ8×3×Φ14)

CLUTCH GEAR

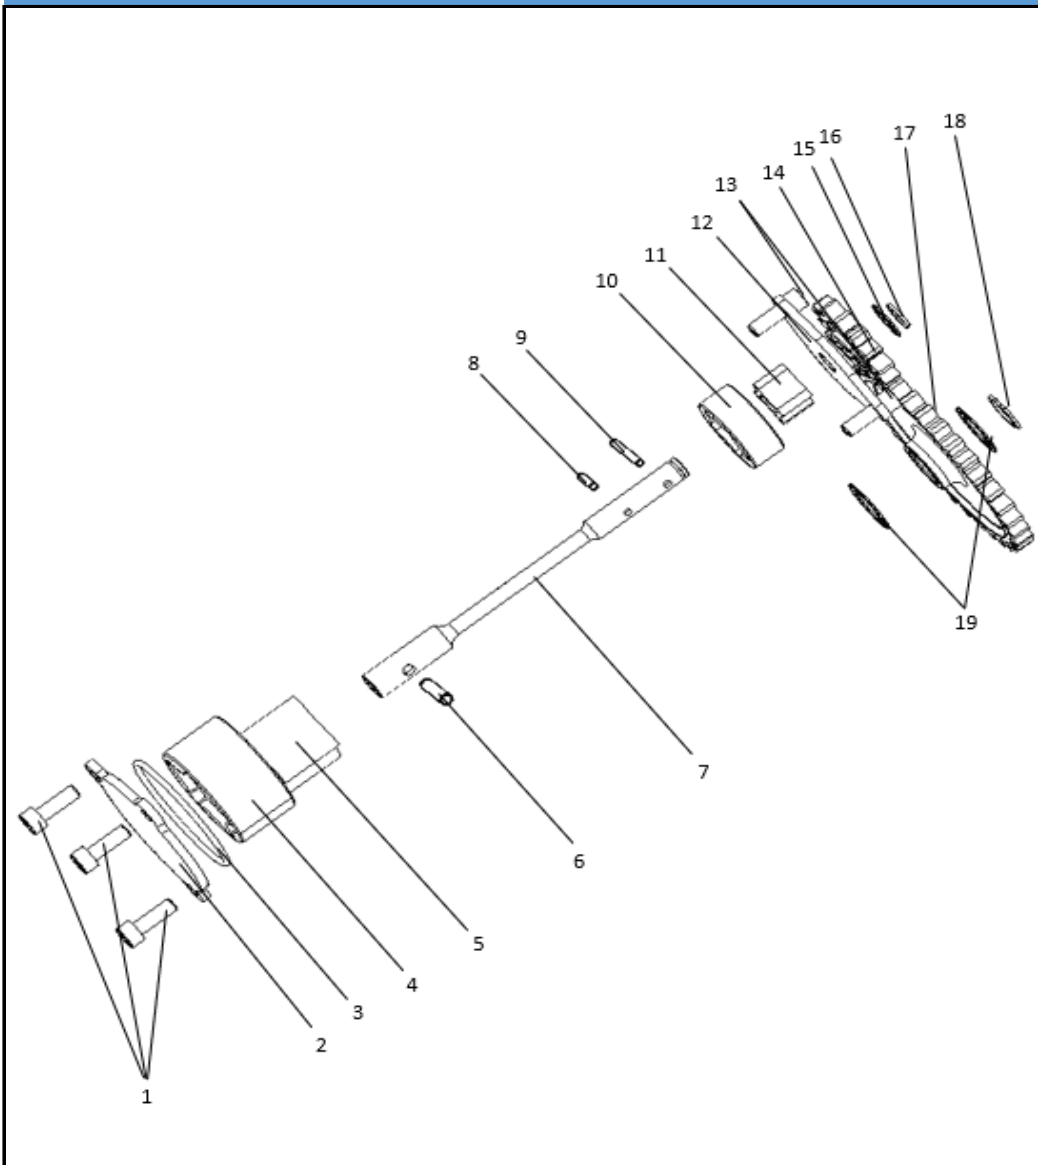


N°	CODE	DESCRIPTION	DESCRIZIONE
1	04.SX.0701.L	BOLT, M6×25	VITE, M6×25
2	04.SX.0702.L	HYDRAULIC SEPARATION PUMP	POMPA DI SEP. IDRAUL.
3	04.SX.0703.L	BOLT, M6×15	VITE, M6×15
4	04.SX.0704.L	HYDRAULIC SEP. PUMP GASKET	GUARNIZ. POMPA DI SEP. IDRAUL.
5	04.SX.0705.L	PUSHING ROD CLUTCH	STELO SPINTA FRIZ.
6	04.SX.0706.L	ROD CLUTCH PUSH	SPINTA FRIZIONE ASTA
7	04.SX.0707.L	BUSH	BOCCOLA
8	04.SX.0708.L	NEEDLE BEARING,(K26×30×13)	CUSCINETTO RULLI K26×30×13
9	04.SX.0709.L	OUTER FRICTION DISK A	DISCO DI FRIZIONE EST. A
10	04.SX.0710.L	OUTER FRICTION DISK A INT	DISCO DI FRIZIONE EST. A CENTR
11	04.SX.0711.L	OUT CASE ASSEMBLY CLUTCH	CESTELLO FRIZIONE
12	04.SX.0712.L	WASHER,Φ22×3×Φ37	RONDELLA,Φ22×3×Φ37
13	04.SX.0713.L	CENTER SLEEVE CLUTCH	CENTRALE FRIZIONE
14	04.SX.0714.L	DRIVE FRICTION DISK	DISCO AZIONAMENTO
15	04.SX.0715.L	PRESSURE PLATE CLUTCH	MOZZETTO SPINTA FRIZIONE
16	04.SX.0716.L	PIN	SPILLO
17	04.SX.0717.L	PRESSURE PLATE SPRING	MOLLA FRIZIONE
18	04.SX.0718.L	PRESSURE PLATE SPRING WASHER	RONDELLA, MOLLA FRIZIONE
19	04.SX.0719.L	STOP WASHER	RONDELLA FERMO
20	04.SX.0720.L	NUT M18×1.5	DADO M18×1,5
		NOT IN USE WITH STM CLUTCH	NON IN USO CON FRIZIONE STM

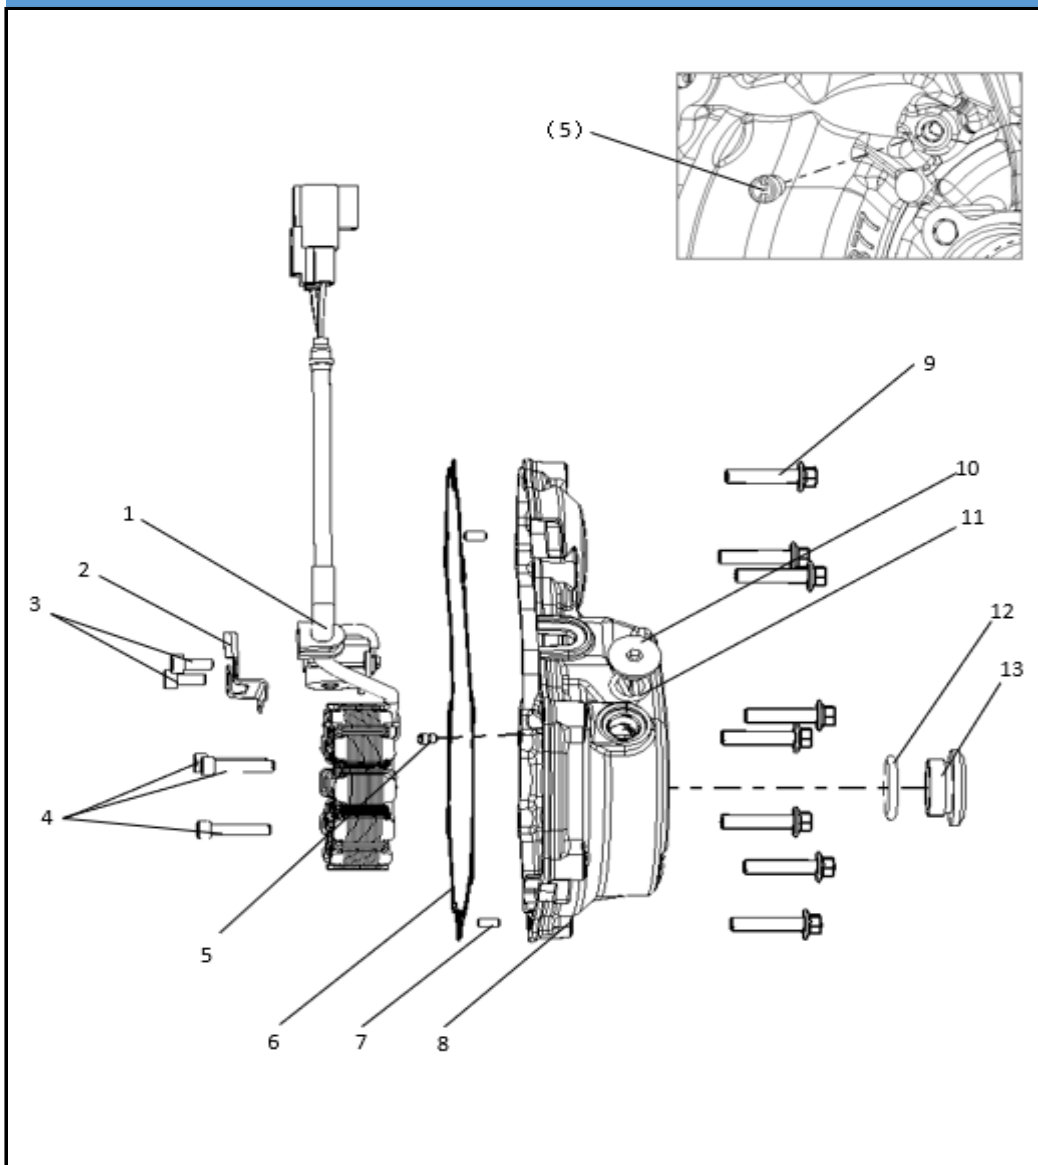
STM SLIPPER CLUTCH



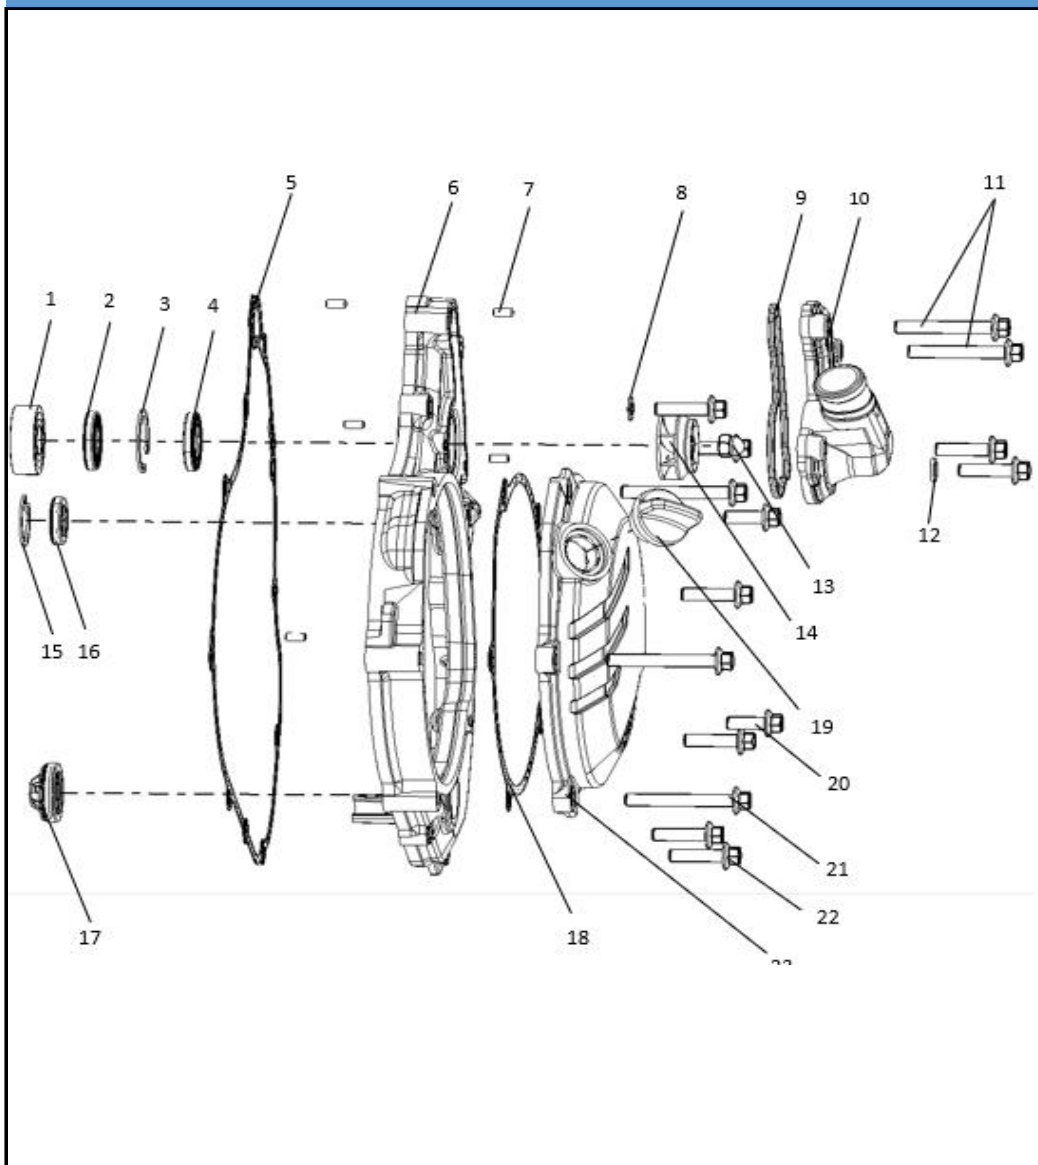
N°	CODE	DESCRIPTION	DESCRIZIONE
1	04.MO.0051.L	NUT TOOL, STM	BUSSOLA SERRAGGIO STM
2	04.MO.0072.L	SCREW M5X16	VITI M5X16
3	04.MO.0168.L	NOTCHED WASHER	RONDELLA ZIGRINATA ANTISV.
4	04.MO.0054.L	BEARING SUPPORT	SUPPORTO CUSCINETTO
5	04.MO.0055.L	CLUTCH NUT	DADO
6	04.MO.0056.L	NOTCHED WASHER	RONDELLA SOTTODADO
7	04.MO.0162.L	BALL BEARING	CUSCINETTO REGGISPINTA
8	04.MO.0058.L	SPRING PUSHER PLATE	DISCO SPINGIMOLLA
9	04.MO.0059.L	PRIMARY SPRING	MOLLA PRIMARIA
10	04.MO.0167.L	ANTI-ROTATION PIN	PERNI ANTIROTAZIONE
11	04.MO.0061.L	PRIMARY SPRING SUPPORT	RASAMENTO APP. MOLLA PRIM.
12	04.MO.0062.L	PRESSURE PLATE	SPINGIDISCO
13	04.MO.0063.L	SECONDARY SPRING	MOLLA SECONDARIA
14	04.MO.0156.L	SECONDARY SPRING SUPPORT	RASAMENTO MOLLA SECOND.
15	04.MO.0155.L	DRUM STOPPER LOCK SCREW	VITE ARRESTO TAMBURO
16	04.MO.0066.L	DRUM STOPPER HUB	MOZZO ARRESTO TAMBURO
17	04.MO.0067.L	TRANSMISSION COLUMNS	SPINE TRASCINAMENTO
18	04.MO.0068.L	DRUM	TAMBURO FRIZIONE
19	04.MO.0152.L	STEEL BALL 1/4"	SFERE 1/4"
20	04.MO.0070.L	HUB	MOZZO FRIZIONE
21	04.MO.0071.L	SPACER	DISTANZIALE
22	04.MO.0052.L	FIXING TOOL, STM	CHIAVE FISSAGGIO STM

OIL PUMP[illegible]

LEFT COVER MOUNTED

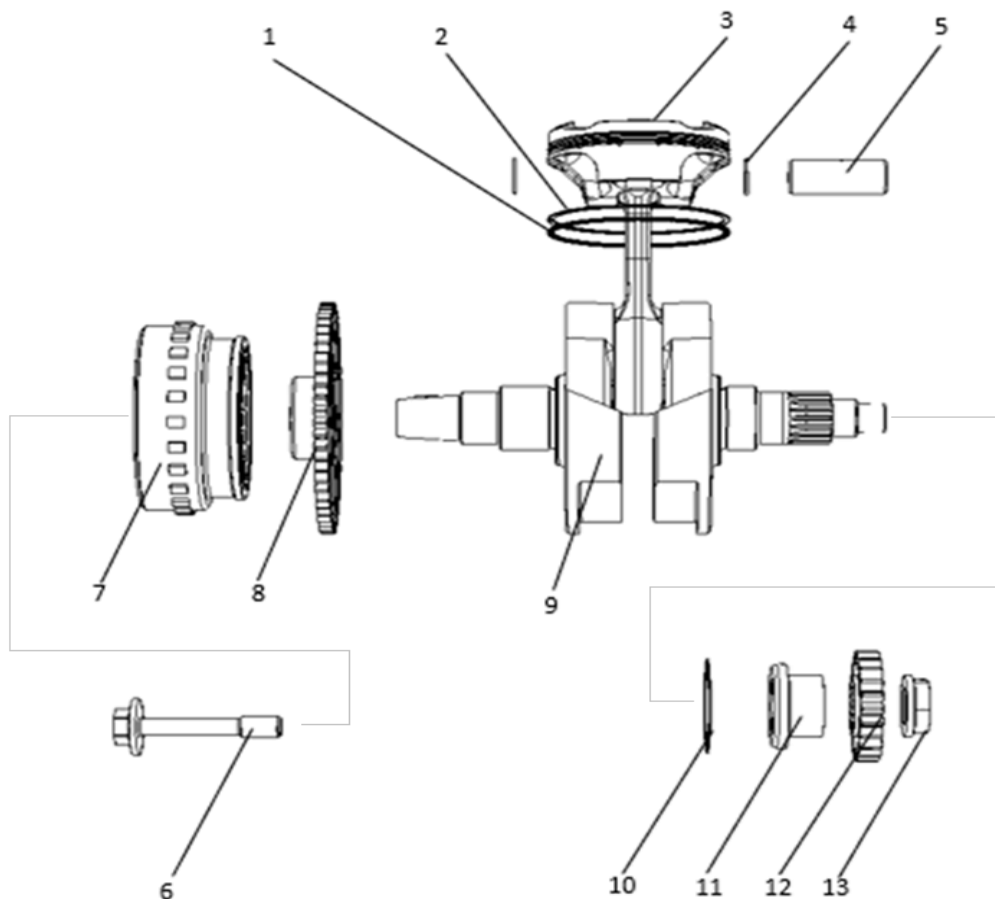
[illegible]

RIGHT COVER MOUNTED

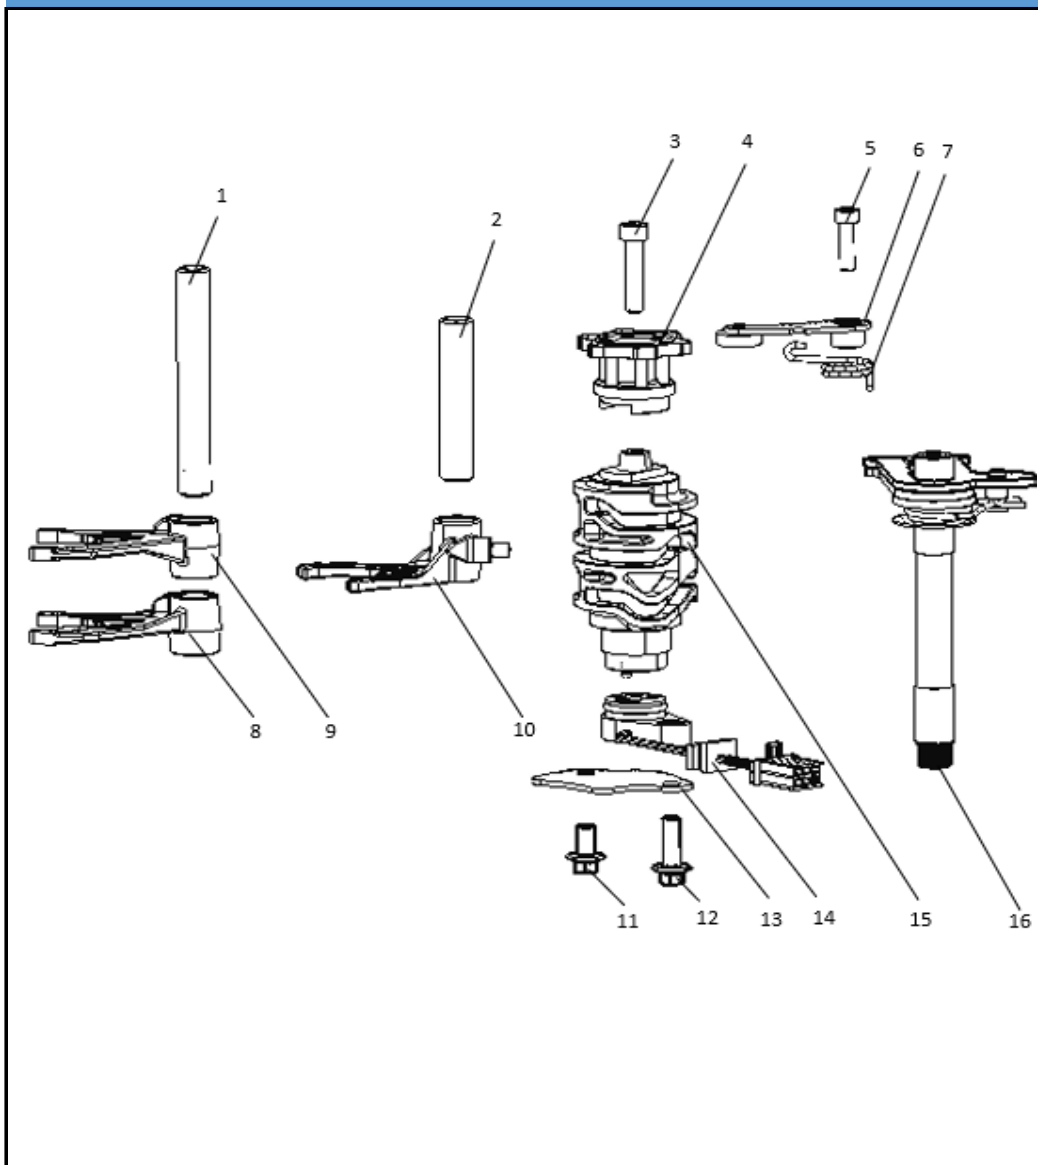


N°	CODE	DESCRIPTION	DESCRIZIONE
1	04.SX.1001.L	BEARING,(6202)	CUSCINETTO,(6202)
2	04.SX.1002.L	OIL SEAL 15×30×4.5	PARAOLIO 15×30×4,5
3	04.SX.1003.L	RETAINING RING,30	SEEGER, 30
4	04.SX.1004.L	OIL SEAL 15×30×4.5	PARAOLIO 15×30×4,5
5	04.SX.1005.L	GASKET RH COVER	GUARNIZ. COPER. DX MOT.
6	04.SX.1006.L	FRONT PART,L.CRANKCASE COVER	COPERCHIO DESTRO MOT.
7	04.SX.0907.L	PIN,Φ4×9	PIN,Φ4×9
8	04.SX.1008.L	WASHER,Φ6.2×1×Φ12	RONDELLA, Φ6,2×1×Φ12
9	04.SX.1009.L	GASKET	GUARNIZIONE
10	04.SX.1010.L	WATER PUMP COVER	COPERCHIO POMPA ACQUA
11	04.SX.1011.L	BOLT, M6×45	VITE, M6×45
12	04.SX.1012.L	WASHER,Φ6.5×1.5×Φ12	RONDELLA, Φ6,5×1,5×Φ12
13	04.SX.1013.L	NUT, M6	DADO, M6
14	04.SX.1014.L	WHEEL WATER PUMP	GIRANTE POMPA ACQUA
15	04.SX.1015.L	RETAINING RING,24	SEEGER, 24
16	04.SX.1016.L	OIL SEAL 14×24×5	PARAOLIO 14×24×5
17	04.SX.1017.L	OIL LELVE SIGHT WINDOW	OBLO OLIO
18	04.SX.1018.L	GASKET DECOTATE COVER	GUARNIZ. COPER. FRIZIONE
19	04.SX.1019.L	OIL PLUG ASSY	GRUPPO TAPPO OLIO
20	04.SX.1020.L	BOLT, M6×18	VITE, M6×18
21	04.SX.1021.L	BOLT, M6×50	VITE, M6×50
22	04.SX.0701.L	BOLT, M6×25	VITE, M6×25
23	04.SX.1023.L	DECORATE COVER R.CRANKCASE COV	COPERCHIO FRIZIONE

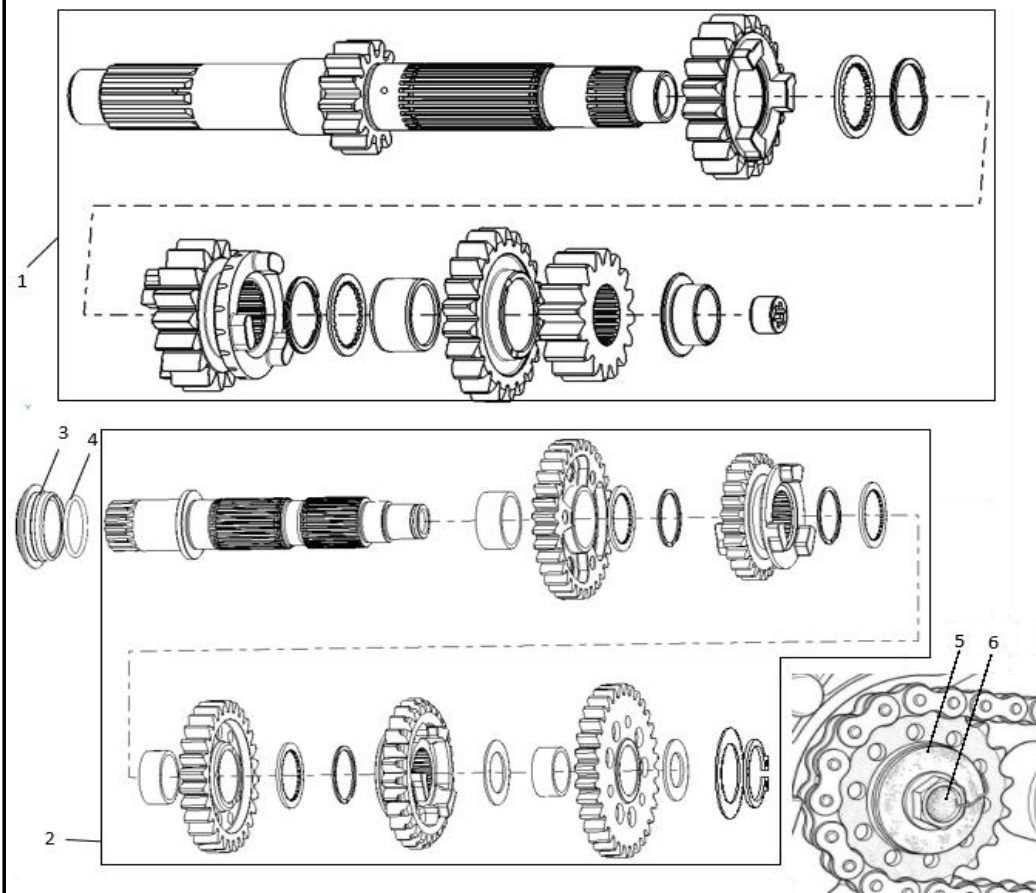
CRANKSHAFT CONNECTING-ROD ASSY/PISTON

[illegible]

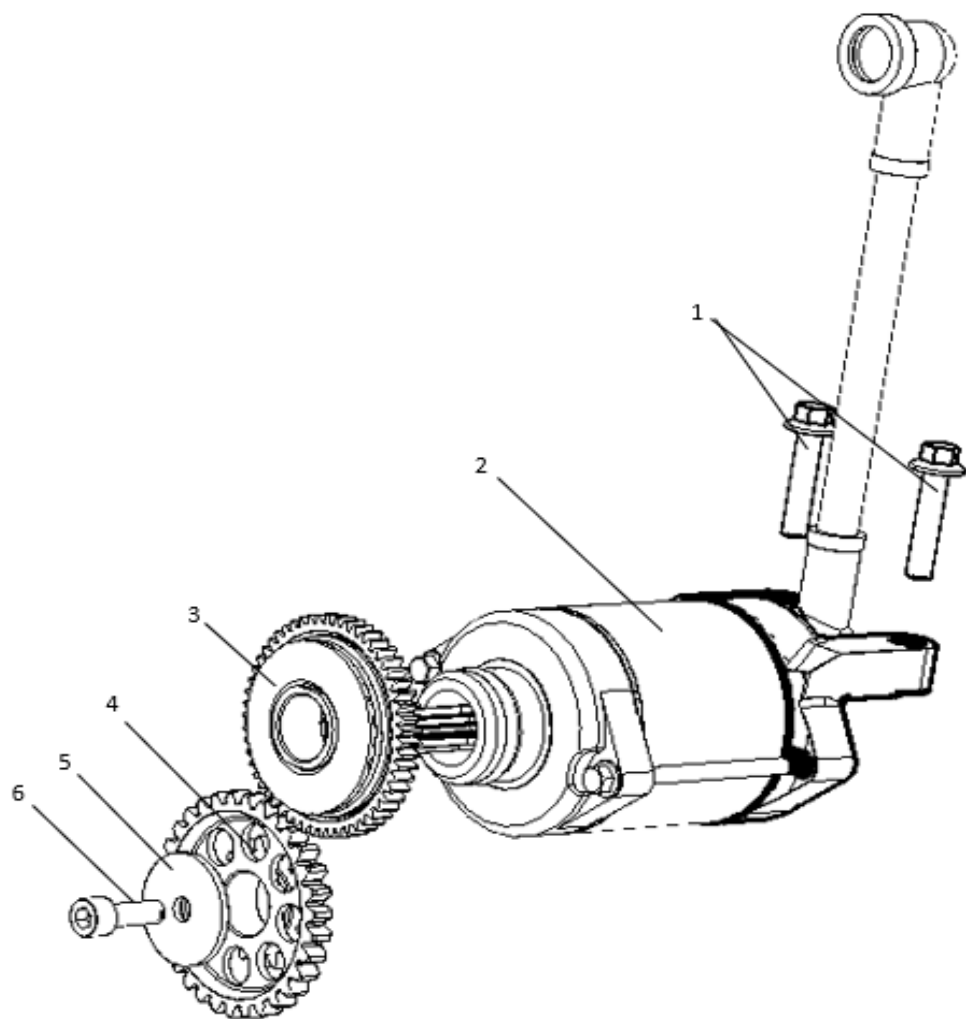
GEARSHIFT MECHANISM

[illegible]

TRANSMISSION MAIN/COUNTER SHAFT

[illegible]

ELECTRIC STARTING MECHANISM

[illegible]



NOTE



OHVALE S.R.L.

Via Evangelista Torricelli, 24
31020 Mogliano Veneto (TV)

Tel. +39 041 5903584 / Fax +39 0415938276

P.Iva/C.F. IT 04604340267

info@ohvale.com